


Torc-Pac „40“

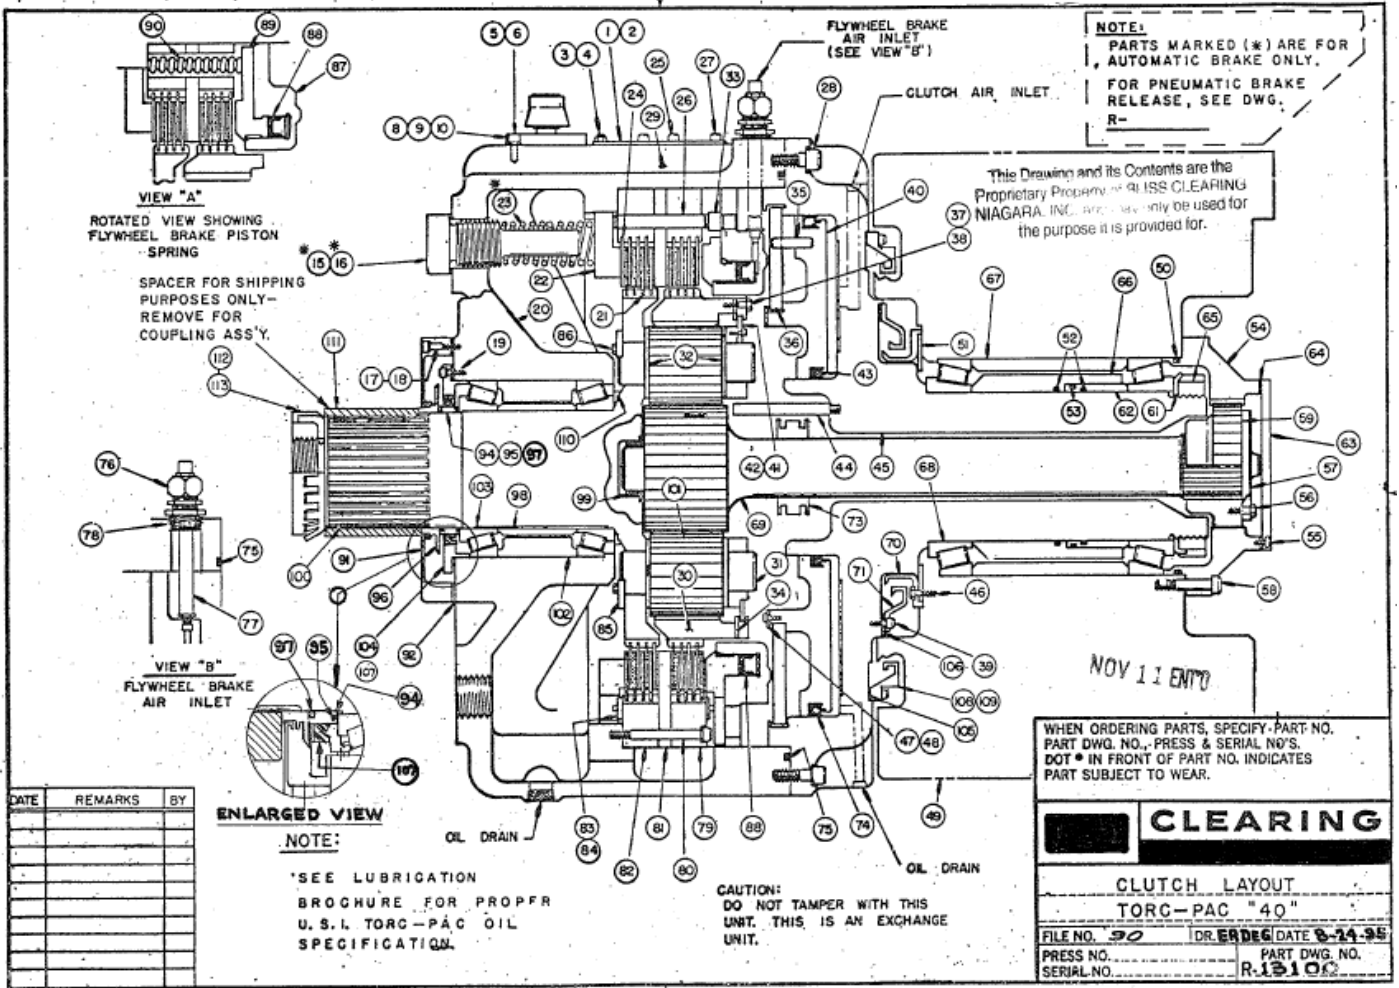

PARTS LIST

Part No.	Description	No. Required	Detail No.	Part No.	Description	No. Required	Detail No.
1	Retainer Plate	1		58	Drive Bolt	12	
2	Gasket	1		59	Spline Hulb	1	
3	Key Bolt	1		60			
4	Hex Nut	1		61	Lockwasher	1	
5	Cap Screw			62	Spacer	1	
6	Lockwasher			63	Cover Plate	1	
7				64	Gasket	1	
8	Retainer Plate	1		65	Locknut	1	
9	Gasket	1		66	Spacer	1	
10	Breather	1		67	Spacer	1	
11				68	Bearing	2	
12				69	Sun Gear	1	
13				70	Oil Slinger	1	
14				71	Oil Catcher	1	
15	Spring Retainer	22		72			
16	Gasket	22		73	Slinger	1	
17	Cap Screw			74	"E" Packing	1	
18	Lockwasher			75	"O" Ring	1	
19	Cap Screw			76	Male Pipe Connector	1	
20	Housing	1		77	Flex. Hose	1	
21	Friction Disc	8		78	Reducer Bushing	1	
22	Brake Pressure Plate	1		79	Clutch Ring	1	
23	Spring	22		80	Cap Screw		
24	Driven Disc	8		81	Back-up Plate	1	
25	Cap Screw			82	Brake Ring	1	
26	Release Pin	8		83	Retainer	4	
27	Cap Screw			84	Cap Screw		
28	Cap Screw			85	Retainer Ring	1	
29	Key	1		86	Cap Screw		
30	Ring Gear	1		87	Pressure Ring	1	
31	Planet Pin	5		88	"U" Packing	1	
32	Planet Washer	10		89	Piston	1	
33	Stop Pin	8		90	Spring	6	
34	Spacer Ring	1		91	Oil Catcher Ring	1	
35	Dowel Pin	4		92	Gasket	1	
36	Polar Lever	24		93			
37	Retainer Ring	1		94	Spacer	1	
38	Cap Screw			95	"O" Ring	1	
39	Cap Screw			96	Oil Slinger	1	
40	Piston	1		97	"O" Ring	1	
41	Guide Ring	1		98	Inner Spacer	1	
42	Cap Screw			99	Bushing	1	
43	"E" Packing	1		100	Planet Spider	1	
44	Lubrication Pipe	1		101	Planet Gear	5	
45	Quill	1		102	Spacer Bushing	1	
46	Cap Screw			103	Bearing	2	
47	Retainer Ring	1		104	Bearing Retainer	1	
48	Cap Screw			105	Gasket	1	
49	Flywheel	1		106	Gasket	1	
50	"O" Ring	1		107	Oil Seal	1	
51	Oil Retainer	1		108	Oil Catcher	1	
52	"O" Ring	2		109	Cap Screw		
53	"O" Ring	1		110	Spacer	1	
54	Drive Hub	1		111	Spacer	1	
55	Cap Screw			112	Lockwasher	1	
56	Cap Screw			113	Locknut	1	
57	Retainer	1					